


HANDLE RKE



All Parts



Step 1

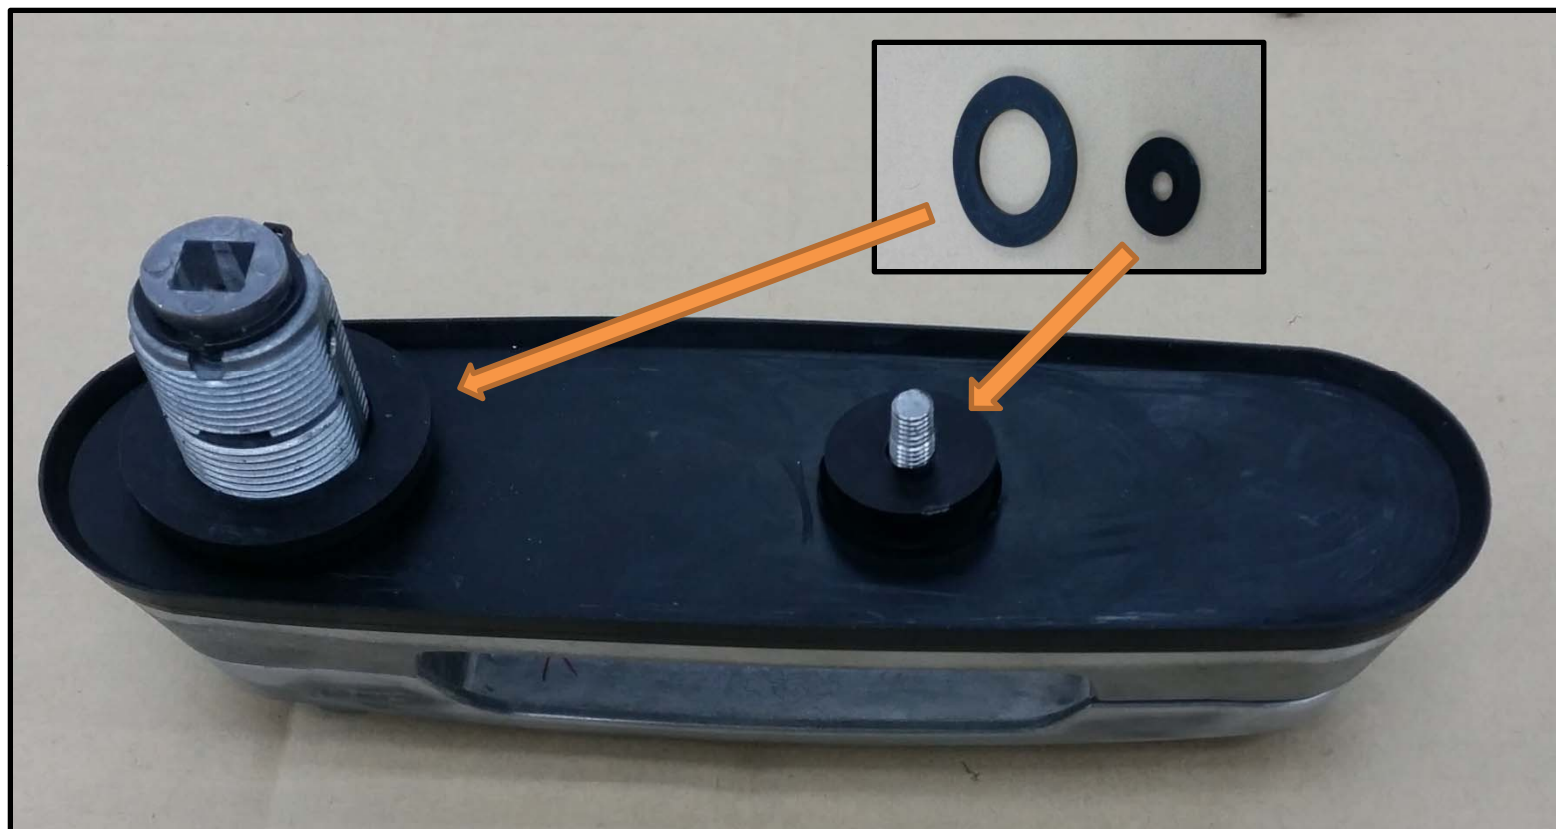


Step 2




Step 3




Step 4

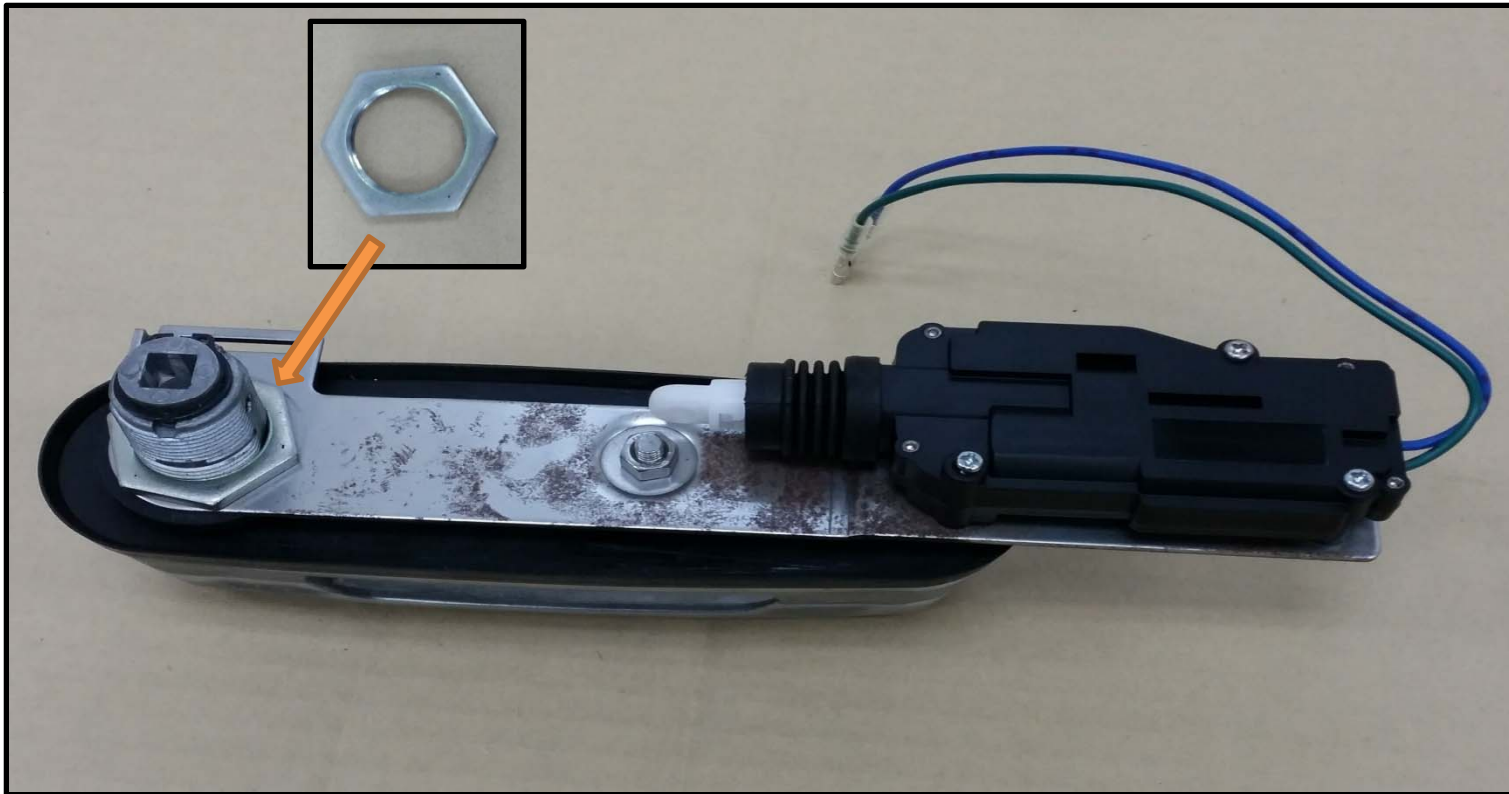


Step 5

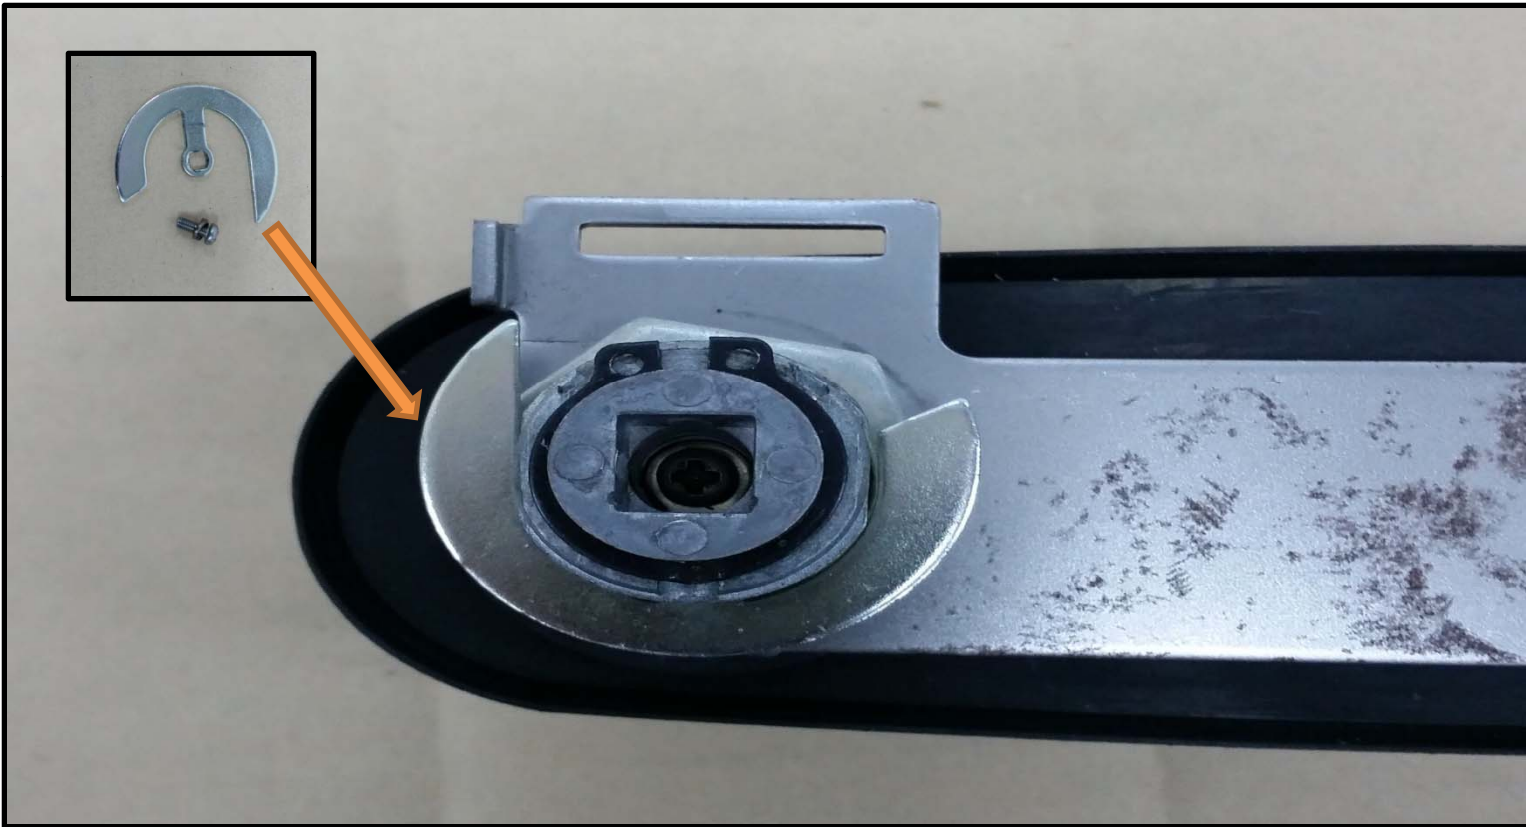


Step 6

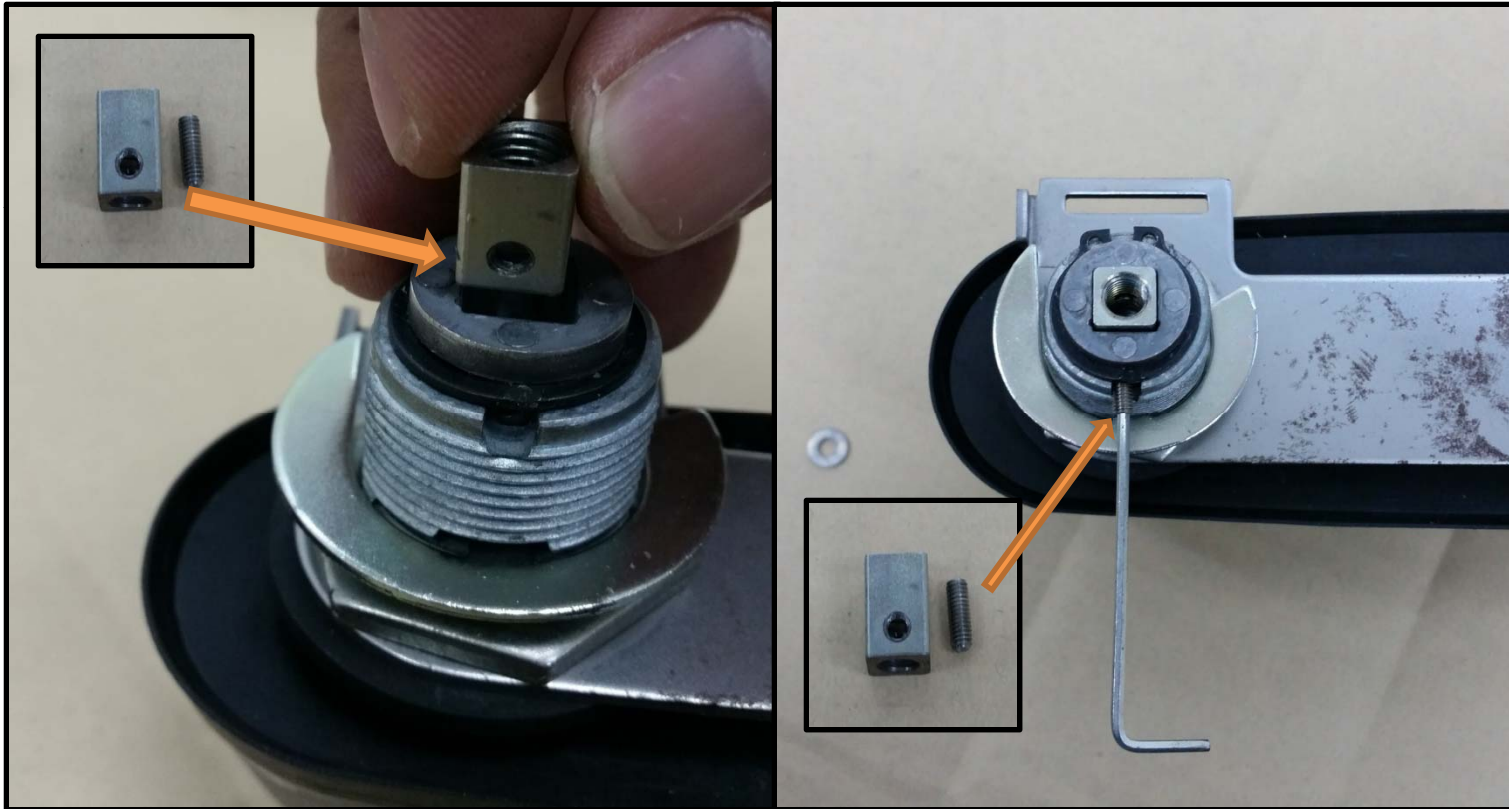


Step 7

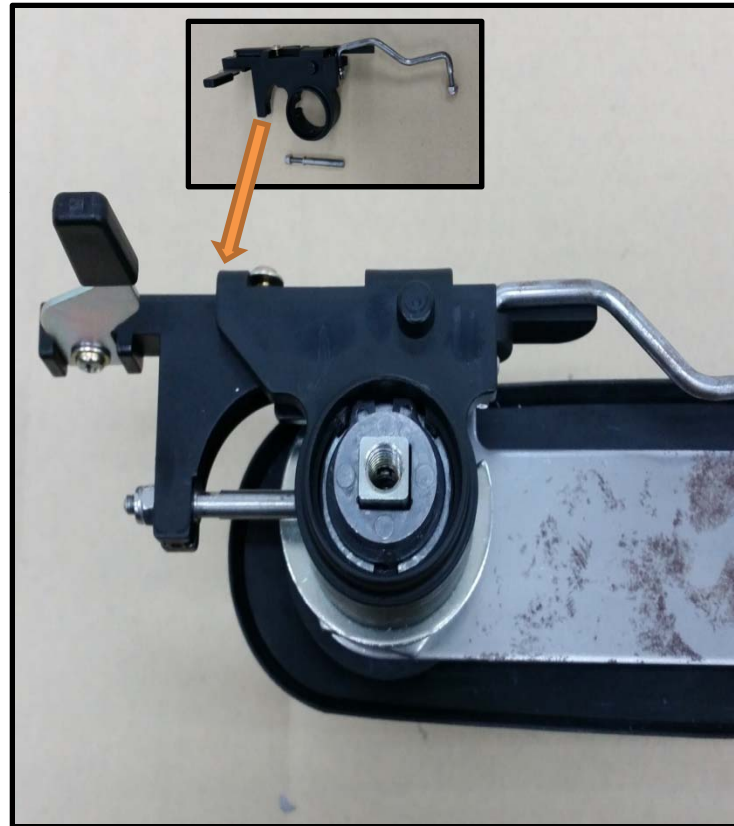

Step 8

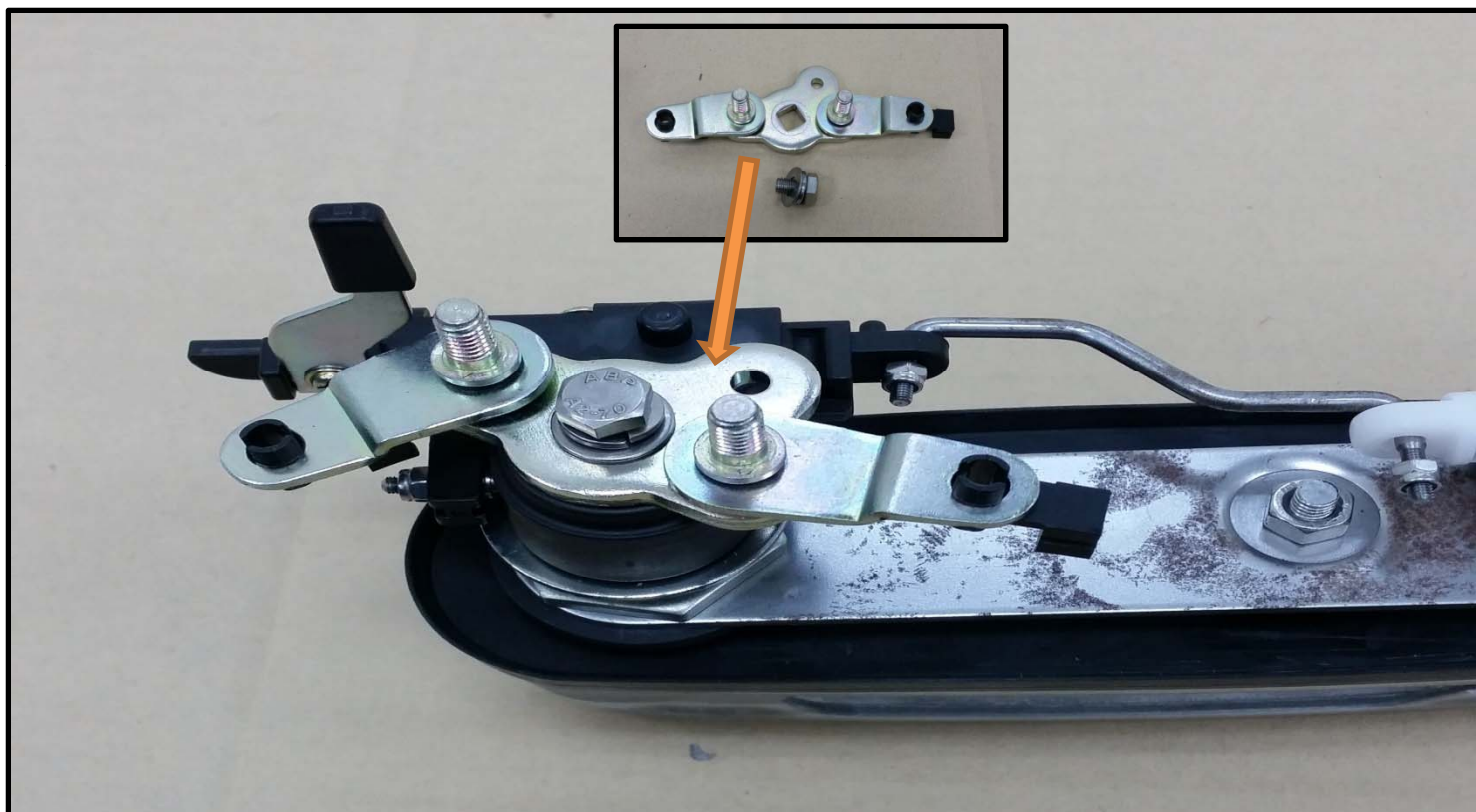


Step 9

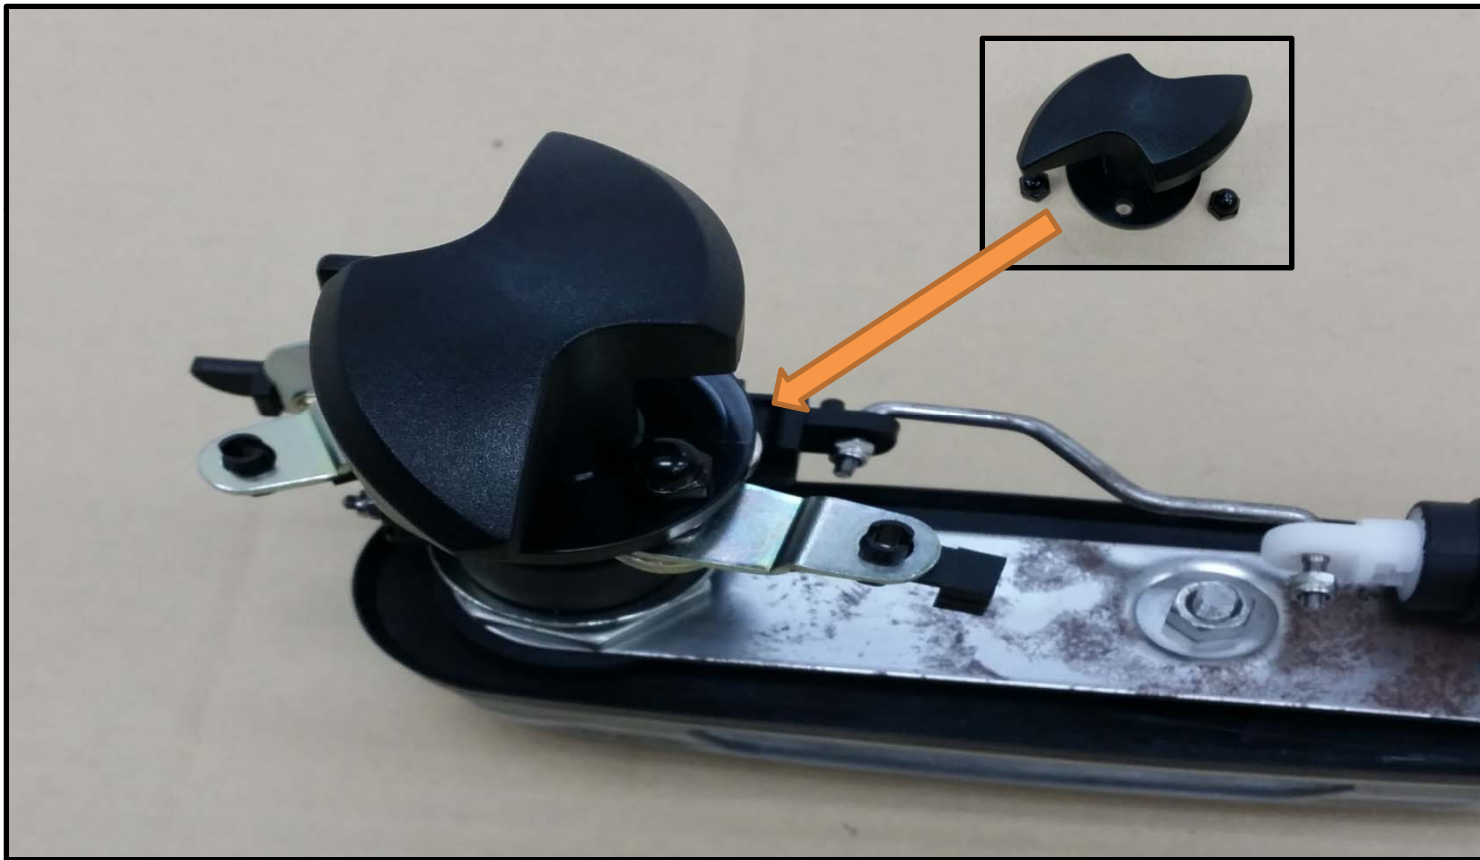

Completed



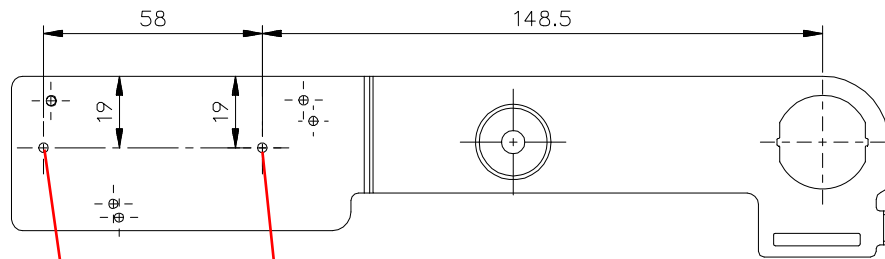

Screw M3x30 = 2 Pcs